



Activity Tracker

Model #21200



Quick Start Guide


ENGLISH




**PLEASE READ THESE INSTRUCTIONS CAREFULLY
TO ENSURE PROPER USE AND SAFE OPERATION OF
YOUR ACTIVITY TRACKER.**

STEP 1


Charge Activity Tracker before pairing it to the app.



Connect the USB charging cable to a USB port.

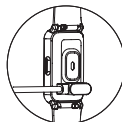


Position the magnetic charging cable to the charging points at the back of your Activity Tracker.



When charging begins, you will see a battery icon on the display screen. The display will automatically switch off after a few seconds.

To check the charging progress, press the button on the side. A solid battery icon indicates a full charge.

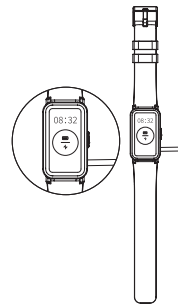

Toll-Free Customer Care Help Line:

1-866-326-1313

Monday – Friday

8:30 a.m. – 4:30 p.m. CST

www.veridianhealthcare.com

Zewa®
Manufactured for
Veridian Healthcare
1175 Lakeside Drive
Gurnee, IL 60031

Made in China

#93-2215 01/25
©2025 Veridian Healthcare, LLC

STEP 2

Download and install the Zewa-Fit Pro App:

www.zewa.com/zewa-fit

Or scan this QR code with your phone:



IMPORTANT: During the install (or when first opening the app, the app will ask several installation questions, accept (say “yes”) to all of them.

STEP 3

Create a new user account.

- After opening the App for the first time, log in using existing login credentials or create a new user account by selecting “Other login Options.”
- When selecting “Other Login Options” select “Create Account.”
- Enter a valid E-Mail address and press “Get Code.”
- The system will E-Mail you a verification code. Enter that code into the app and press “Login.”
- Continue with entering your information.

STEP 4

Pair Activity Tracker.

- In the app, tap on “Device” at the bottom of your screen.
- Tap on “Add device.”
- Select “Zewa AT4.”
- Confirm pairing by pressing  on the Activity Tracker display.

PRODUCT IS FOR NON-MEDICAL USE ONLY

This device or software is intended for use only for general wellbeing purposes or to encourage or maintain a healthy lifestyle, and is not intended to be used for any medical purpose (such as the detection, diagnosis, monitoring, management or treatment of any medical condition or disease). Any health-related information provided by this device or software should not be treated as medical advice. Please consult a physician for any medical advice required.



For a detailed description of your warranty, please refer to the instruction manual.

www.veridianhealthcare.com